

7. Connect all required circuit points and push double DIN head into dash board

Reinstall everything in reverse order to finish installation.




## Double-DIN Kit Installation Manual

black: 381190-37-1 rubbber-touch: 381190-37-2

- Mercedes A-Class (W169) 10/2004 04/2012
- Mercedes B-Class (T245) 06/2005 06/2011

## Compatible with these navigation devices

## **Double DIN Navigation**

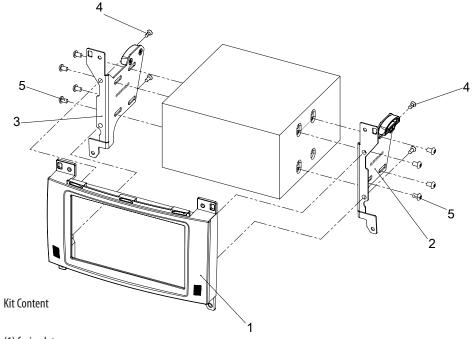

- (1) facia plate
- (2) mounting bracket right
- (4) countersunk flat head tapping screw
- (3) mounting bracket left
- (5) flat headed screw

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidential or indirect damages.



Insert pulling hooks into air vent catches. Pull out air vents



Disconnect plugs for hazard light switch



Remove four torx screws Remove OEM head unit



Remove air vents completely



Unclip and remove lower panel

