



Installation instructions for part 95-7366B

## Kia Sorento 2016-up 95-7366B


### KIT FEATURES

- ISO DDIN radio provision
- **Painted scratch resistant black**



### KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets

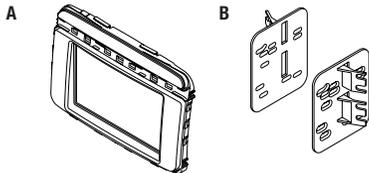

### WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7304, HYBL-04

Antenna Adapter: • Not required

### TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • 10mm Socket wrench • Cutting tool

### Table of Contents


Dash Disassembly .....	2
Kit Preparation .....	2
Kit Assembly .....	3

**CAUTION!** Metra recommends disconnecting the negative battery terminal before beginning any installation, unless the vehicle manufacturer recommends against so. Please check with your local Dealership for more information. All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before reconnecting the battery or cycling the ignition. Also, do not remove the factory radio with the key in the on position, or the vehicle running. It would be best to remove the key from the ignition and then wait a few seconds before removing the factory radio.


## Dash Disassembly

1. Unclip and remove the factory radio trim panel including the a/c vents. (Figure A)
2. Remove (4) Phillips screws securing the radio and then remove. (Figure B)

*Continue to kit preparation*

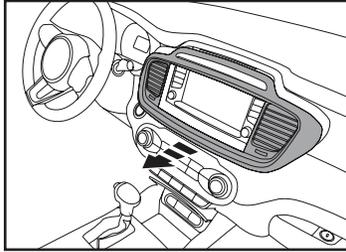

(Figure A)

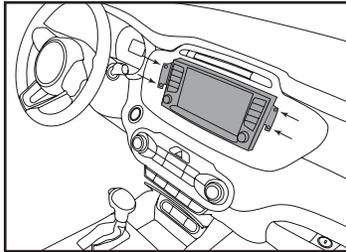


(Figure B)

## Kit Preparation

1. Cut the marked area in the dash cavity. (Figure A)
2. Remove (1) 10mm nut holding the area previously cut in step 1 to remove the cut-out area.

*Continue to kit assembly*

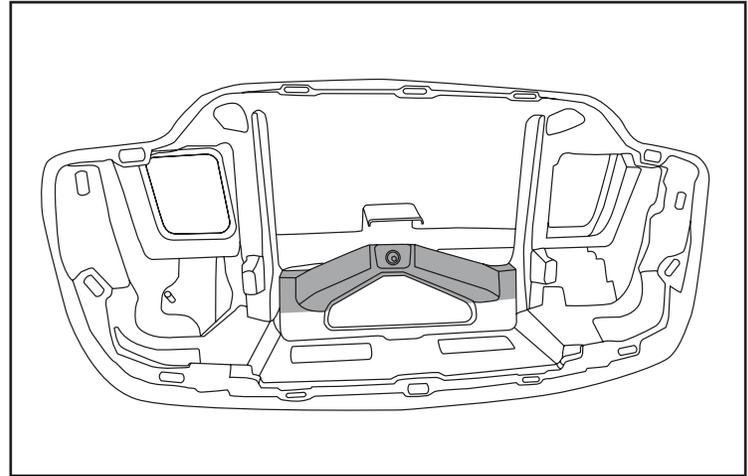


(Figure A)

## Kit Assembly

### ISO DDIN radio provision

1. Attach the *radio brackets* to the radio using the screws supplied with the radio. (Figure A)
2. Locate the factory wiring harness and antenna plug in the dash and make all necessary connections to the radio. Metra recommends using the proper mating adapters from Metra and/or AXCESS. Re-connect the negative battery terminal and test the radio for proper operation.
3. Secure the completed assembly into the sub-dash using the factory hardware.
4. Snap the 7366 *radio trim panel* into the factory trim panel, and then reassemble the dash in reverse order of disassembly.

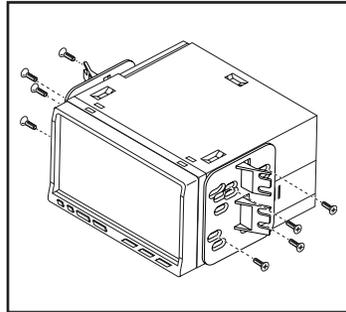

(Figure A)



Installation instructions for part 95-7366B



REV. 9/21/2015 INST95-7366B

## IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



### KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP certified technicians**