

# SUBARU

## FORESTER 2015->

Compatible with double DIN devices



Mount the brackets and connect all cable then insert the aftermarket unit into the housing and fix it with screws saved before (on the top side), use the screws supplied for the bottom side. Verify the proper functioning of the system.



Remount the clima controls and reassemble, in reverse order, using parts saved before and mount the fascia plate provided.



This is the final result.



Double DIN Kit content

Facia Plate  
Mounting Brackets + Screws

## Installation Manual Double DIN Kit



Remove the clima control panel.




Remove the plastic panel by unscrewing the screw under the steering wheel.




Remove the screw of the original OEM inside the panel shown in the figure.



Remove the second screw of the original OEM, inside the glove box, as shown in the picture.

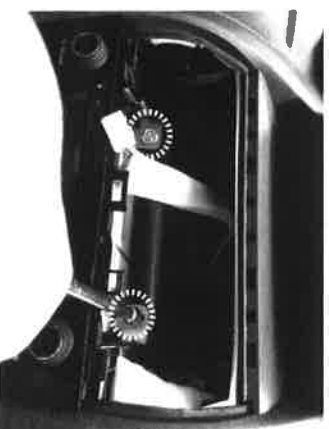

Unscrew and save the two retaining screws shown in the figure.

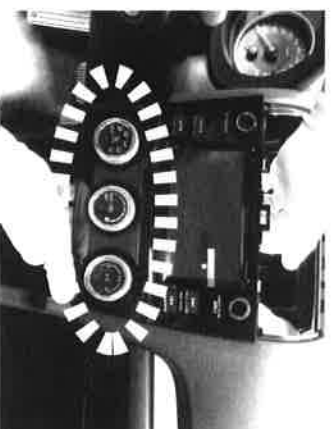

Remove the original unit, unmount and save the clima controls.