

20. as needed fix speaker with cyanoacrylate adhesive

Spare OEM hazard light switch by Ford required. Ford Part-No.: 1519127







- 21. Mount
 - air vents
 - hazard light switch
 to facia plate

Push facia plate on dash board until it snaps in

22. Fix facia plate with 2 OEM screws (see arrows)



8

23. Re-install everything in reverse order to finish installation

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidential or indirect damages. © 12/2010 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.




Installation Manual Double DIN Kit

piano black:	381114-22-1
dark grey:	381114-22-2
dark brown:	381114-22-3
matt black:	381114-22-4

Ford Ford C-MAX (DXA) 12/2010-> Ford Kuga (DM2) 03/2013->

Compatible with these double DIN devices

Double-DIN Navigation

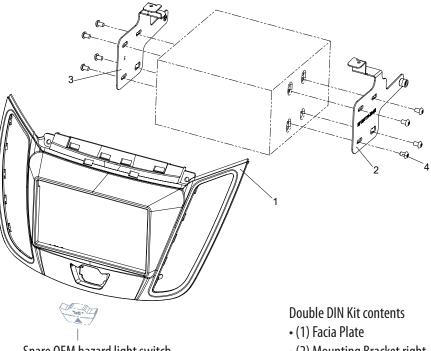

Spare OEM hazard light switch by Ford required Ford Part-No.: 1519127

- (2) Mounting Bracket right
- (3) Mounting Bracket left
- (4) flat headed screws



1. Ford C-MAX with OEM radio



Unclip speaker grill at 2.

Remove speaker grill 3.



18. Fix mounting brackets to Double DIN head unit

Connect all required circuit points

7


Push Double DIN head unit into dash board

19. Fix Double DIN head unit



Unclip cover of center console 4.



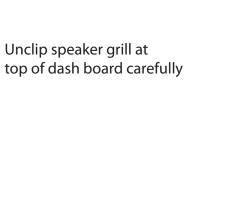

17. Dashboard after plastic cut out



- 14. Remove screws of OEM Radio/CD unit
 - Remove OEM Radio/CD unit



15. Cut away plastic to clear space for Double DIN head unit



16. Remove plastic





6. Unclip cover center console



7. Remove top panel cover

5. Remove screws of center console



8. Unclip display



- 9. Remove display



10. Unclip center panel





11. Remove screw (see arrow)



12. Remove screws on top of OEM head unit (left and right)



13. Unclip air vents Remove air vents

